


欢迎使用T-MAX-M头盔无线耳机, 使用本产品前请先阅读此说明书。
本产品安装在头盔外部, 可与手机无线连接实现接听, 挂断电话、播放音乐等功能。

1.按键介绍

- 1.多功能键/开关机键
- 2.旋钮
- 3.充电插口
- 4.耳机插口
- 5.LED指示灯
- 6.降噪麦克风
- 7.喇叭

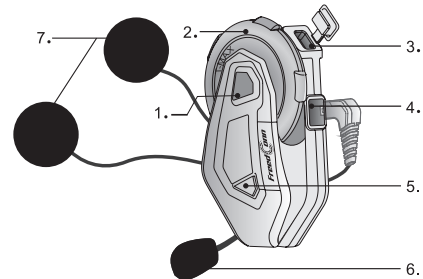

2.如何安装

- 1.使用提供的螺丝刀松开耳机夹子的螺丝(如图1)。
- 2.拨开头盔内衬,将耳机夹子卡入头盔左边合适位置,紧固螺丝(如图2、3)。
- 3.将蓝牙主机对应夹子的孔卡入,确保主机安装到位无松动(如图4、5)。



- 4.找到头盔离耳朵最近处, 揭开头盔内衬,清理干净后贴上魔术贴毛面(如图6)。
- 5.将贴有魔术贴勾面的喇叭对应魔术贴毛面贴好并整理好头盔内衬(如图7)。
- 6.将耳机插头对应蓝牙主体耳机插口插入即安装完成(如图8)。



3.如何配对

1. 与手机配对

- (1) 需要配对的蓝牙耳机与带蓝牙的手机放在相距1米范围。
- (2) 确定蓝牙耳机已经被关机。
- (3) 按住蓝牙耳机的开关机键3秒, 听见一声提示音“欢迎使用Freedconn产品”, 指示灯以红色和蓝色交替闪烁时放手。
- (4) 按照移动电话用户手册指示,激活手机电话备有的蓝牙功能,搜索蓝牙耳机设备。
- (5) 选择带有“T-MAX”字样的蓝牙设备,然后选择手机与蓝牙耳机配对,继而红蓝指示灯将转入蓝色灯有规律的闪动(每6秒闪一次),然后会听见一声提示音“蓝牙已连接”。蓝牙耳机与手机配对成功,即可通过蓝牙耳机进行播放音乐、收听FM电台广播、可接听、挂断电话。
注意:优先级:电话 > 音乐,播放音乐时来电话,音乐暂停,通话结束后, 音乐自动恢复。

4.功能及操作方法

1.开机	在关机状态下,按住多功能键3秒直至听到“欢迎使用Freedconn产品”提示音,蓝色指示灯快速闪动三下继而转入有规律的闪动。
2.关机	在开机状态下,长按多功能键2秒,红色指示灯长亮1秒,继而熄灭,关机后有“关机”提示音
3.接听电话	蓝牙耳机与手机已配对状态下, 当有来电时,按下多功能键即可接听电话, 当来电报号10秒后, 无任何操作时自动接听来电。
4.拒绝接听来电	在听到来电铃声时立即按下多功能键2秒,直至听到一声“嘀”声时松手。
5.语音拨号	在无通话时, 连续按三下多功能键,有“语音呼叫”提示音。
6.终止通话	在手机通话时,按下多功能键或正常使用手机电话结束通话。
7.音乐播放/暂停	按一次多功能键暂停播放, 再按一下恢复播放。
8.上/下曲	顺时针旋转一下旋钮换下一曲, 逆时针旋转一下旋钮换上一曲。
9.增/减音量	顺时针旋转旋钮到头不放, 音量增大, 增大至你想要的音量时放手, 最大时会有“嘟嘟”提示音, 逆时针旋转旋钮到头不放, 音量减小, 减小至你想要的音量时放手。
10.电话、音乐切换	在听立体声音乐或收音机时,若有来电或外拨电话时,声音将会自动切换到手机通话状态, 当通话结束后,蓝牙耳机将会自动恢复到接电话前的状态。

11.音乐、FM切换	音乐状态下连续按两次多功能键切换到FM模式, 再连续按两次切回音乐模式。
12.FM功能	切换到FM模式时会自动收台, 搜台时间为40秒左右, 搜台完成后会自动保存有效电台, 逆时针旋一下多功能键切换到上一频段电台, 顺时针旋一下切换到下一频段电台。
13.中/英提示音切换	蓝牙未连接手机的情况下, 连续按三下多功能键。

5.电池电量指示功能

- (1) 电池电量充足时, 开机蓝灯每6s闪1次;
- (2) 电池电量不足时, 每1分钟有“电池电量低”提示音, 红灯6s闪一次;
- (3) 电池正在充电时, 红灯长亮;
- (4) 电池充电完成后(约2小时), 红灯灭。

注: 电池容量: 570mA,待机168小时, 连续工作时长: 连续通话/音乐长达 14小时

6.日常保养

- (1) 切勿将耳机放置在温度极高或极低的地方, 最佳存放环境为-40度到+60度, 否则会影响耳机的使用寿命;
- (2) 切勿将耳机暴露在明火之中, 避免爆炸危险;
- (3) 切勿将耳机接触尖锐对象, 会造成划痕或损坏;
- (4) 切勿尝试拆卸耳机;
- (5) 如长时间不使用耳机, 请确保放置在干燥的地方, 若放置超过一个月要按时给与充电, 以保证电池及耳机的工作性能。



保修卡

型号:T-MAX-M

请保存好您的购物收据、保修卡和撕毁无效标贴

姓名: _____

地址: _____

售后服务: service@fdcdz.com

故障描述:

请在保修卡后面贴上收据的复印件, 以证明购买日期。
使用过程中如发现产品有故障, 请联系我们的售后服务。
请确保在保修卡上填写清楚产品的故障、问题等, 以便我们及时为您处理。


2
年
保修期

Welcome to use our wireless headset T-MAX-M helmet. Please read the instructions before using this product.

To use this product, mount it on the outside of the helmet, and you can implement answering calls, hanging up, playing music and other functions through its wireless connection with your mobile phone.

1.Introduction to the buttons

1. Multi-function key/switch key
2. Knob
3. Charging socket
4. Headphone jack
5. LED indicator lamp
6. Noise reduction microphone
7. Speaker

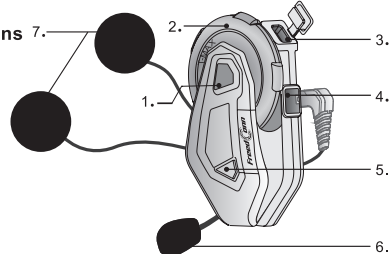

2.How to install it

- 1.Use the screwdriver supplied to loosen the screws in the headphone holder (as shown in Figure 1).
- 2.Remove the helmet lining, clip the earphone clip into the right place on the left side of the helmet, and tighten the screws (as shown in Figure 2 and 3).
- 3.Insert the clamps into the corresponding hole on the bluetooth headset so as to ensure that the bluetooth is installed in place without looseness (as shown in Figure 4 and 5).



Picutre-1



Picutre-2



Picutre-3



Picutre-4



Picutre-5

- 4.Locate the point on the helmet, which is closest to the ears, and remove the helmet lining, clean and adhere the rough side surface of Velcro (as shown in Figure 6).
- 5.Adhere the hook side of the speaker to the corresponding rough side of Velcro and arrange the helmet lining properly (as shown in Figure 7).
- 6.Insert the headphone plug into the corresponding socket on the bluetooth headset and the installation is completed (as shown in Figure 8).



Picutre-6



Picutre-7



Picutre-8

3.How to pair up

1.Pair with your phone

- (1) Place the bluetooth headset that needs to be paired with the mobile phone with bluetooth within a distance of 1 meter.
- (2) Make sure that the bluetooth headset has been turned off
- (3) Hold down the On/Off button of the bluetooth headset for 3 seconds till you hear a prompt "Welcome to Freedconn product" and the indicator lamp flashes red and blue alternately.
- (4) Search for the bluetooth headphone device according to the instructions in the mobile phone user manual/by activating the bluetooth function provided on the mobile phone.
- (5) Select the bluetooth device with the characters "T-MAX", then choose pairing phone with bluetooth headset, then the red-blue indicator lamp will change to the blue lamp which flashes regularly (flash once every 6 seconds), and then you will hear the prompt tone "Bluetooth connected". Your bluetooth headset and your mobile phone have paired successfully, you can play music through the bluetooth headset, listen to FM radio as well as answer calls, hang up the phone.

Note: The priority is phone > music, If there is an incoming call when you are playing music, the music will be interrupted and automatically resume once the call is ended.

4. Functions and operating method

1.Turn on	In the shutdown mode, hold down the multi-function button for 3 seconds until you hear the prompt tone "Welcome to Freedconn product".The blue lamp flashes three times quickly and then switches to a regular flashing.
2.Turn off	In the power-on state, press down the multi-function button for 2 seconds and the red indicator lamp will be on for 1 second, then off. After shutdown, there will be the prompt tone "Shutdown"
3.Answer the phone	With the bluetooth headset and the mobile phone being paired, when there is an incoming call, press the multifunction button to answer the call; 10 seconds after the incoming number is announced, the incoming call will be answered automatically with no operations performed.
4.Refuse to answer an incoming call	Press the multifunction button as soon as you hear the ring for 2 seconds, until you hear the sound "Tick".
5.Voice dialing	When there is no call, press down the multi-function button three times successively and there will be the prompt tone "Voice dialing".
6.Terminate a call	During a call, terminate the call by pressing down the multifunction button or operating the mobile phone normally.
7.Play/pause music	Press down the multifunction button once to pause, then press it again to resume.
8.Previous/next song	Turn the knob clockwise to change to the next song, turn the knob counterclockwise to change to the previous song.
9.Increase/decrease the sound volume	Turn the knob clockwise to the end and hold, the sound volume will increase, keeping holding until you've got the sound volume you want; there will be the prompt tone "Beep" at the maximum volume. Turn the knob counterclockwise to the end and hold, the sound volume will decrease, keeping holding until you've got the required sound volume.

10.Switch over between calls and music	If there is an incoming call or an outgoing call while listening to stereo music or FM, the voice will automatically switch to the phone call state. When the call ends, the bluetooth headset will automatically restore the previous state.
11.Switch over between music and FM	While in the music state, press down the multifunction button twice consecutively to switch to FM mode, and then press it down twice consecutively to cut back to the music mode.
12. FM function	Upon being switched to FM mode, searching for stations will be automatically performed, and this searching will last about 40 seconds. After searching of stations is completed, the effective stations will be automatically saved. Rotate the multifunction button counterclockwise once to switch to a station of a lower frequency band and clockwise to a station of a higher frequency band.
13.Switch between Chinese and English prompts	While in the music state, press down the multifunction button twice consecutively to switch to FM mode, and then press it down twice consecutively to cut back to the music mode.

5.Battery setting indicating function

- (1) When the battery is fully charged, the blue indicator lamp will flash every 6s upon start-up;
 - (2) If the battery power is insufficient, there will be a prompt tone "Battery power is low" every 1 minute, and the red indicator lamp will flash once every 6s;
 - (3) When the battery is being charged, the red indicator lamp will stay on;
 - (4) The red lamp will go off once the battery charging is completed (about 2 hours).
- Note: The battery capacity: 570mA, 168 hours for standby, continuous working time: up to 14 hours for continuous calls and music playing

6.Daily maintenance

- (1) The best storage environment is -40 degrees to +60 degrees. Never place the headset in a place with an extremely high or low temperature, otherwise the service life of the headset may be affected;
- (2) Never expose the earphone to open fire so as to avoid the risk of explosion;
- (3) Never cause the earphone to contact with sharp objects, which may cause scratches or damage;
- (4) Never attempt to remove the headset;
- (5) If you intend not to use the earphone for an extended period of time, be sure to always keep it in a dry place. If it is not be used for more than one month, please charge it on time so as to ensure the working performance of the battery and the earphone.

Warranty Card

Model Number : T-MAX-M

2 Year
Warranty

Please keep your purchase receipt together with your warranty card
& "invalid if removed" label

Name: _____

Address: _____

After sale service: service@fdcdz.com

Failure Description:

Please affix a copy of invoice on the back of warranty card as a proof of purchase date.
If you find any problems during use of our product, please contact our after sale service.
Please make sure that you describe the problems clearly on warranty card so that we can handle them timely.